



ENGINE UNIT OF EBV260E-E			
No.	Parts No.	Parts Name	Qty.
1	GB/T9074.6	Screw M5×10	1
2	1E34F.11-2	Start Rope Reel	1
3	1E34F.11-3	Rope	1
4	1E34F.11-1	Recoil Spring	1
5	1E34F.11.1	Start Cover Ass'y	1
6	GB/T9074.4	Screw M4×16	4
7	1E34F.11.1-1	Guide Bushing	1
8	1E36F.1-1	Start Handle	1
9	1E36F.1-5	Resist Gasket	1
10	1E34F.11G	Starter(PA6-GF30)	1
11	1E34F.8-1	Start pole	1
12	1E34F.8-2	Spring	1
13	1E34F.8.1	Start Reel	1
14	1E34F.8	Start Reel Ass'y	1
15	1E36F.2	Oil-seal	2
16	1E34F-E.6-1	Crank Case	1

17	1E34F-E.6-2	Gasket	1
18	GB/T276	Bearing 6001/P5	2
19	1E34F-E.4.1	Crank Shaft	1
20	1E40FP-3Z.3-1	Key 3×5×13	1
21	GB/T119.2	Pin B3×10	2
22	1E34F-E.6-3	Crank Case	1
23	GB/T70.1	Screw M5×30	4
24	1E34F-E.3.1	MAGNETO ROTOR COMP.	1
25	EBV260E.1-3	LINK SHAFT	1
26	1E34F-E.3.2	IGNITION COIL COMP.	1
27	EBV260E.1.2	Cord Comp.	2
28	GB9074.13	Screw M5×20	2
29	1E31F.4.1	Bearing	1
30	1E34F.6-2	Ring	2
31	1E34F-E.4-1	Piston	1
32	1E34F.6-3	Piston Pin	1
33	1E34F.6-5	Piston Ring	2
34	1E34F-E-3	Gasket	1
35	1E34F-E-1	Cylinder	1
36	GB/T70.1	Screw M5×20	4
37	L8RTC	Spark Plug	1
38	1E40F-3A.8-2	Spring	1
39	1E34F.5-3	Plug Cap	1
40	1E34F-E.3-1	Cap	1
41	1E40F-5.3-1	Plug	1
42	EBV260E.1-1	Gasket	1
43	EBV260E.1.1	Muffler	1
44	EBV260E-5	Cover	1
45	1E36F-2-9	Bolt	1
46	GB/T6187.1	Nut M5	2
47	EBV260E.1.5	Board seam	1
48	1E34F.4	Admitting Pipe	1
49	EBV260E.1-4	Gasket	2
50	EBV260E.8A	Carburetor	1
51	EBV260E.1.3.1-2	Choker Handle	1
52	GB/T96.1	Washer 3	2
53	GB/T845	Screw ST2.9×6.5	2
54	EBV260E.1.3.1-3	Cleaner inside cover	1
55	GB/T9074.4	Screw M5×60	2
56	EBV260E.1.3.1-1	Choker	1
57	EBV260E.1.3.2	Filter Net	1
58	EBV260E.1.3-1	Cleaner outside cover	1
59	EBV260E.1.3.2-1	Screw	1
60	1E34F.9.2-3A	Cleaner Cover	1
61	1E34F.9.2-2	Fuel Pipe	1

62	1E36FF.8.1-1	Plug	1
63	GB/T13527.1	Fuel Pipe LS-3×1×80	1
64	GB/T9074.4	Screw M5×16	2
65	EBV260E.1.4	Fuel Tank	1
66	1E32FL.6.2-4	Chain	1
67	1E32FL.6.2-3	End Cover	1
68	1E32FL.6.2-2	Inside Cover	1
69	EB-415.4.1.1-1	Inlet	1
70	CG420.1.3.1-2	Gasket	1
71	1E32FL.6.2-1	Fuel Tank Lid	1
72	1E32FL.6.2	Lid Ass'y	1
73	1E40F-5A-3	Rubber washer	2
74	GB/T9074.4	Screw M5×25	2
75	1E36F-E-11	Gasket	1

BASIC UNIT OF EBV260E-E

No.	Parts No.	Parts Name	Qty.
1	EBV260E.2.2	VOLUTE CASE	1
2	EBV260E-6	WASHER	2
3	EBV260.2.1	IMPELLER	1
4	EBV260-2	COMMINUTE BOARD	1
5	GB/T889.1M8	NUT	1
6	EBV260E.2.1.1	VOLUTE CASE	1
7	EBV260.2.3-1	SWITCH ANTENNA	1
8	EBV260.2.3.2	SWITCH	1
9	EBV260.2.3-2	SWITCH CARAPACE	1
10	GB/T818 M5X10	SCREW	3
11	EBV260.2-2	SPING SCREW	1
12	EBV260.2-3	SPING	1
13	GB96 6	WASHER	1
14	GB9074.4 M5X10	SCREW	1
15	EBV260.2.4	SCREW	1
16	GB/T3452.1	SEALING WASHER	1
17	EBV260.2-1	NET COVER	2
18	EB-260.4	FUEL THROTTLE	2
19	EBV260.3	SWITCH	1
20	GB/T6172.1	NUT M5	1
21	GB/T6177.1	NUT M5	1
22	EBV260E-2	WASHER	1
23	EBV260E-3	SWITCH	1
24	GB9047.4M5X30	SCREW	1
25	EBV260E.5	STOP WIRE	2
26	EBV260E.6	STOP SWITCH	1
27	EB-260-8	PIPE	1

28	EB-260-7(A)	PIPE	1
29	EBV260-6	COLLECT PLUG	1
30	EBV260E.4	SACK	1
31	EBV260E.2-1	PROTECTION	1
32	EBV260E-4	HANDGRIP	1
33	EBV260A-1	PIPE	1
34	EBV260-8	PIPE	1
35	GB9047.4M5X16	SCREW	11