

BASE UNIT OF TG1000I

No.	No.	Code	Description(CN)	Description(EN)	QTY
1	A1	21120-B001-0000	左保养盖	maintenance cover	1
2	A4	21133-B001-0000	保养盖螺钉 (发黑)	maintenance cover screw	1
3	A4	21231-B001-0000	左保养盖密封条	maintenance cover packing	1
4	A1	21003-B001-0000	左壳体组件	left encloser subassembly	1
5	A4	21004-B001-0000	手柄支撑板	handle support	1
6		GB/T818-2000	螺钉M5X8 (发黑)	Screw M5×8	8
7		GB/T95-1985	平垫 φ5 (黑色)	Washer φ5	28
8	A4	14323-A142-0000	油开关手柄	switch handle	1
9		GB/T818-2000	螺钉M4X16 (黑色)	Screw M4×16	1
10		GB/T95-1985	平垫 φ4 (黑色)	Washer φ4	4
11	A4	21130-B001-0000	整机左减振座	left absorber	2
12		GB/T5789-1986	螺栓M5X12 (白锌)	bolt M5×12	18
13		GB/T818-2000	螺钉M5X20 (黑色)	Screw M5×20	6
14	A4	21101-B001-0000	熄火开关盖板	engine switch cover	1
15	A4	23106-B001-0000	熄火开关 (KW11-02-15.8)	engine switch	1
16		GB/T845-1985	自攻螺钉4.2X12 (发黑)	Tapping screwST4.2×12	6
17		14330-A142-0000	KM50油开关组件	fuel switch	1
18	A4	14010-A142-0000	油管卡 φ7X0.8 (白锌)	Clip φ7×0.8	3
19		14302-A142-0000	油管 φ4X8X140	Fuel tube φ4×φ8×140	1
20	A4	14305-A142-0000	油管卡 φ9X1.2 (白锌)	Clip φ9×1.2	5
21		14340-A142-0000	汽油泵KM50	fuel pump	1
22		14303-A142-0000	油管 φ4X8X200	Fuel tube φ4×φ8×200	1
23	A2	21231-B001-0000	火花塞保养盖	spark plug maintenance cover	1
24	A4	21232-B001-0000	火花塞保养盖密封条	spark plug maintenance cover packin	1
25		GB/818-2000	螺钉M5X100 (发黑)	Screw M5×100	2
26	A1	21220-B001-0000	右壳体组件	right encloser subassembly	1
27	A4	21240-B001-0000	整机右减振座	right absorber	2
28	A4	21011-B001-0000	发动机下支撑管	engine support	3
29		GB/T41-2000	螺母M5 (加厚黑色)	nut M5	2
30	A4	21016-B001-0000	发动机上减振垫圈	bottom absorber washer	2
31	A4	21009-B001-0000	发动机上减振块	top absorber	2
32	A4	21001-B001-0000	发动机上支撑管	engine top support	1
33	A4	14301-A142-0000	油箱出油管 φ4X8X260	fuel tube φ4×φ8×260	1
34		14350-A142-0000	油箱出油嘴滤网	fuel output filter	1
35	A4	22001-B001-0000	逆变器上支撑	inverter top support	2
36	A4	14309-A142-0000	油箱右支撑	fuel tank support	1
37	A1	14310-A142-0000	油箱	fuel tank	1
38	A2	14311-A142-0000	溢油槽	fuel tank absorber	1
39	A4	14372-A142-0000	油箱开口销	split pin	1
40		GB/95-1985	垫片 φ5 (白锌)	Washer φ5	1
41	A4	14326-A142-0000	油箱盖弹簧	fuel cap spring	1
42	A4	21025-B001-0000	油箱盖垫片 φ7X22X1.2	Washer φ7×φ22×1.2	1
43	A4	14323-A142-0000	油箱盖密封垫	fuel cap seal	1
44	A4	14324-A142-0000	油箱盖滤心	fuel cap filter	1

45	A4	14322-A142-0000	油箱盖本体	fuel cap	1
46	A4	14321-A142-0000	油箱盖O型密封圈	O-ring	1
47	A4	14328-A142-0000	油箱盖旋扭	fuel cap lever	1
48	A4	21301-B001-0000	排气罩密封圈	muffler cover packing	1
49	A1	21302-B001-0000	排气罩	muffler cover	1
50		GB/T818-2000	螺钉M5X16（发黑）	Screw M5×16	3
51		23000-B001-0000	1KW逆变器	inverter	1
52	A4	22002-B001-0000	逆变器下支撑块	inverter bottom support	2
53		23160-B001-0000	整流器	Bridge Rectifier	1
54	A2	23200-B001-0000	线束组合	Internal wire	1
55	A2	23101-B001-0000	面板本体	panel	1
56		23141-B001-0000	德式插座垫板	AC socket washer	1
57		23140-B001-0000	带门德式插座2P+E黑	AC socket	1
58		GB/T119.1-2000	平基螺钉M4X8	Screw M4×8	4
59		GB/T818-2000	螺钉M5X16（彩锌）	Screw M5×16	1
60		GB/T95-1985	垫片Φ5（彩锌）	Washer Φ5	7
61		GB/T859-1987	弹簧垫圈Φ5（彩锌）	spring lock washer Φ5	1
62		GB/T6172.1-2000	六角薄螺母M5（彩锌）	nut M5	3
63	A4	23150-B001-0000	微调开关（KCD6-21黑）	smart throttle switch	1
64	A1	23001-B001-0000	面板安装板	panel enclosure	1
65	A4	23130-B001-0000	T型插座（带过载保护）	DC socket	1
66	A4	23131-B001-0000	T型插座安装垫圈	DC socket washer	1
67	A4	16150-A142-0000	点火器	ignition	1
68	A3	23002-B001-0000	面板后盖	panel cover	1
69	A4	23003-B001-0000	逆变器接地线垫	washer	1

BASE UNIT OF TG1000I

No.	No.	Code	Description (CN)	Description (EN)	QTY
70		11104-A142-0000	机油滤网	Oil filter	1
71		GB/T818-2000	螺钉M3X5	Screw M3×5	3
72	A4	11103-A142-0000	簧片阀压板	Board limiting the reed valve	1
73	A4	11102-A142-0000	簧片阀	Reed valve	1
74	A1	11120-A144-0000	气缸组件	Cylinder subassembly	1
75	A4	11101-A142-003	火花塞	Spark plug	1
76	A4	13006-A142-0000	进气门	Intake valve	1
77	A4	13007-A142-0000	排气门	Exhaust valve	1
78	A4	13008-A142-0000	气门油封	Valve seal	1
79	A4	13005-A142-0000	气门弹簧	Valve spring	2
80	A4	13004-A142-0000	气门锁夹	Valve retainer	2
81	A4	13034-A142-0000	上摇臂轴	Rocker shaft	1
82	A4	13031-A142-0000	上摇臂组件	Rocker subassembly	2
83	A4	13003-A142-0000	推杆	Push rod	2
84	A4	13001-A142-0000	下摇臂	Lifter	2
85	A4	13002-A142-0000	下摇臂轴	Lifter shaft	2
86	A4	13021-A142-0000	凸轮	Cam	1
87	A3	11131-A142-0000	缸头盖	Cylinder head cover	1
88		GB/T16674-1996	法兰盘螺栓M5X20	bolt M5×20	24
89	A4	12104-A144-0000	气环1	Piston ring I	1

90	A4	12105-A144-0000	气环2	Piston ring II	1
91	A4	12120-A144-0000	刮片环	flat type oil ring	2
92	A4	12121-A144-0000	衬环	spring expander	1
93	A3	12101-A144-0000	活塞	Piston	1
94	A4	12102-A144-0000	活塞销挡圈	Piston pin clip	2
95	A4	12103-A144-0000	活塞销	Piston pin	1
96	A4	12221-A142-0000	连杆体	Connection rod	1
97	A3	12230-A142-0000	曲轴组件	Crankshaft subassembly	1
98		GB/T276-1994	6203轴承	Bearing 6203D	1
99	A4	12233-A142-0000	半圆键3X13	Semicircular key 3×5×13	1
100	A4	GB/T119.1-2000	定位销Φ6X12	Locating pin Φ6×12	4
101	A1	11201-A142-0000	箱体	Crankcase	1
102	A4	11202-A142-0000	油封Φ17X27X5	Oil seal Φ17×27×5	1
103	A4	11222-A142-0000	机油尺密封圈	Oil dipstick seal	1
104	A4	11221-A142-0000	机油尺	Oil dipstick	1
105	A4	11231-A142-0000	机油报警器密封圈34X2.5	Oil alert seal	1
106	A4	11230-A142-0000	机油报警器	Oil alert	1
107	A4	21006-B001-0000	发动机下减振衬套	bottom absorber bush	3
108	A4	21012-B001-0000	发动机下减振橡胶	bottom absorber	3
109		GB/T16674-1996	螺栓M6X25(白锌)	bolt M6×25	3
110	A3	21004-B001-0000	发动机下支撑板	engine bottom support	1
111	A4	16130-A142-0000	触发器	Igniton trigger	1
112		GB845-1985	自功螺钉ST4.2×10	Tapping screwST4.2×10	2
113	A1	14003-A142-0000	左导流板	Left reflecting board	1
114	A1	15004-A142-0000	右导流板	Right reflecting board	1
115	A3	16200-A142-0000	定子组件	Stator subassembly	1
116	A3	16300-A142-0000	转子组件	Rotor subassembly	1
117		GB/T6177.2-2000	螺母M10X1.25(白锌)	nut M10×1.25	1
118	A3	16201-A142-0000	风扇	Cooling fan	1
119	A4	17102-A142-0000	棘轮座	Ratch seat	1
120		GB/T16674-1996	螺栓M6X16(白锌)	bolt M6×16	2
121	A4	17101-A142-0000	棘轮	Ratch	1
122		GB/T16674-1996	螺栓M6X12(白锌)	bolt M6×12	2
123	A4	17205-A142-0000	双头螺栓M5X86(彩锌)	bolt M5×86	2
124	A4	17202-A142-0000	导风罩安装嵌件	Cooling hood nesting	3
125	A2	17201-A142-0000	导风罩	Cooling hood	1
126	A4	17205-A142-0000	接地线板	ground plate	1
127	A1	17203-A142-0000	启动器安装嵌件	Nesting fixing startr	3
128	A4	16120-A142-0000	高压包	ignition booster	1
129		GB/T5856.4-1995	自功螺钉4.8X19(发黑)	Tapping screwST4.8×19	2
130	A4	17204-A142-0000	双头螺栓M5X53(彩锌)	bolt M5×53	1
131	A4	14204-A142-0000	空滤器盖板(闷盖)	Air cleaner baffle	1
132	A4	14206-A142-0000	空滤器滤心	Air cleaner filter	1
133	A4	14207-A142-0000	空滤器密封条	Air cleaner packing	1
134	A4	14205-A142-0000	空滤器盖	Air cleaner cover	1
135	A4	17127-A142-0000	卷轴轴螺钉	Reel screw	1
136	A4	17126-A142-0000	棘爪座	Pawl seat	1
137	A4	17125-A142-0000	棘爪	Pawl	2

138	A4	17124-A142-0000	卷轴弹簧	Starter spring	1
139	A4	17123-A142-0000	启动器卷轴 (启动盘)	Reel	1
140	A4	17122-A142-0000	启动器卷簧	Coil spring	1
141	A4	17121-A142-0000	启动器外壳	Starter shell	1
142	A4	17129-A142-0000	拉绳护套	Rope nesting	1
143		17128-A142-0000	拉绳	Rope	1
144	A4	17130-A142-0000	手柄	Handle	1
145	A4	17132-A142-0000	手柄盖	Handle cover	1
146	A4	14220-A142-0000	废气管 $\phi 7 \times \phi 11 \times 140$	Ventilaing pipe $\phi 7 \times \phi 11 \times 140$	1
147	A4	14304-A142-0000	泵油管 $\phi 6 \times 10 \times 330$	Pumping fuel pipe $\phi 6 \times \phi 10 \times 330$	1
148	A4	14011-A142-0000	双头螺栓M5X96 (彩锌)	bolt M5 \times 96	2
149	A4	14001-A142-0000	隔热板垫	Insulating board gasket	1
150	A4	14002-A142-0000	隔热板	Insulating board	1
151	A4	14004-A142-0000	化油器垫	Carburetor gasket	1
152	A4	14403-A142-0000	调速缓冲弹簧	Governor damping spring	1
153	A4	14404-A142-0000	调速头	Governor joint	1
154	A4	14422-A142-0000	调速电机下壳体	Governor motor bottom hood	1
155		GB/T818-2000	螺钉M4X10 (发黑)	ScrewM4 \times 10	2
156	A4	14430-A142-0000	调速电机	Governor motor	1
157	A4	14421-A142-0000	调速电机上壳体	Governor motor top hood	1
158	A2	14100-A144-0000	化油器	Carburetor	1
159	A4	14201-A142-0000	进气管垫	Intake pipe gasket	1
160	A4	14223-A142-0000	进气管嵌件	Intake pipe nesting	2
161	A4	14221-A142-0001	进气管右壳体	intake pipe right body	1
162	A4	14222-A142-0000	进气管左壳体	intake pipe left body	1
163		GB845-1985	白攻螺钉ST4.2X8 (发黑)	Tapping screwST4.2 \times 8	2
164		GB/T6177.1-2000	法兰螺母M5 (白锌)	nut M5	6
165	A4	14203-A142-0000	进气管卡箍	Intake pipe clip	2
166	A4	14202-A142-0000	进气管接头	Intake pipe joint	1
167	A4	15001-A142-0000	排气管垫	Exhaust pipe gasket	1
168	A4	15002-A142-0000	排气管	Exhaust pipe	1
169	A4	15003-A142-0000	消声器垫	Muffler gasket	1
170	A1	11301-A142-0000	箱盖	Crankcase cover	1
171		15120-A142-0000	消声器组件	Muffler	1
172		GB/T16674-1996	螺栓M6X40 (发黑)	bolt M6 \times 40	1
173		GB/T16674-1996	螺栓M6X55 (发黑)	bolt M6 \times 55	2
174		GB/T818-2000	螺钉M5X18 (黑色)	Screw M5 \times 18	5
175	A4	11322-A142-0000	调速齿轮轴	Covernor gear shaft	1
176	A4	11321-A142-0000	调速齿轮	Covernor gear	1
177	A4	GB/T895.2-1986	调速轴卡圈	Covernor gear shaft clip	1
178	A4	13003-A142-0000	下摇臂轴套	Lifter shaft pipe	1
179		16301-A142-0000	热缩管	Heat shrinkable tube	1
180	A4	14405-A142-0000	三通接头	three wag joint	1
181	A4	12223-A142-0000	搅油杆	Oil pole	1
182	A4	GB/T16674-1996	法兰盘螺栓M5X25	bolt M5 \times 25	2
183	A4	23122-B001-0000	扎带3X120	enlace strip	3
184	A4	23128-B001-0000	保险盒	fuse box	1
185	A4	23129-B001-0000	保险丝(10A)	fuse	1
186	A4	TG2000i.02-3	油箱进油滤网	filter cup	1
187	A4	23132-B001-0000	T型充电线	T-charge wire	1
188	A4	23120-B001-0000	德式插头2P+E	plug	1
189	A4	14327-B001-0000	加机油壶	Oil pot	1
190	A4	23123-B001-0000	火花塞套筒	spark plug wrench	1
191	A4	23124-B001-0000	套筒杆	plug wrench rod	1
192			自封袋	Zipper bag	2

193		包装袋 (67X64)	packing bag	1
194		包装箱46.37*28.04*41.7	packaging box	1